



INSTRUCTIONS

THE TRIMPRO UNPLUGGED IS DESIGNED TO BE USED WITH FRESHLY HARVESTED PLANTS.

MACHINE ASSEMBLY


Your Trimpro Unplugged comes assembled except for the following:

- i. Attach the turning handle by sliding it into the shaft and tightening the set screw with the Allan Key provided.
Note: make sure the top of the shaft is flush with the top of the handle.
- ii. Attach the gripping handle onto the side of the upper cylinder

USER INSTRUCTIONS

 
1. Carefully read the safety instructions (see warnings ⚠) before using the Unplugged.
2. Place 2-3 handfuls of freshly harvested plants without branches into the upper container.
3. Turn the handle either direction for 1 to 3 minutes or until the desired cut is obtained.
4. Lift off upper cylinder to remove trimmed plants.
5. Remove the gearbox/grate assembly to access the trimmed plant material.
6. **CAUTION** ⚠ Blade is extremely sharp. Avoid contact



1.  Carefully read the security instructions




4.

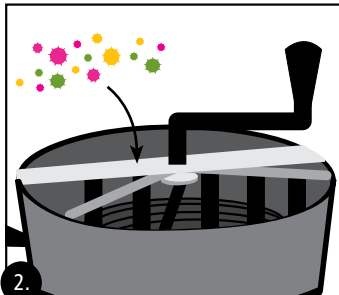


2.



 3.

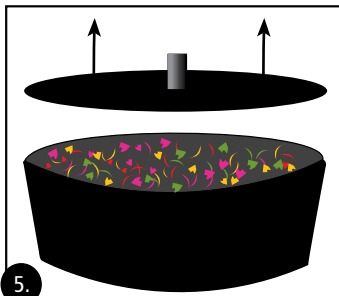

 5.

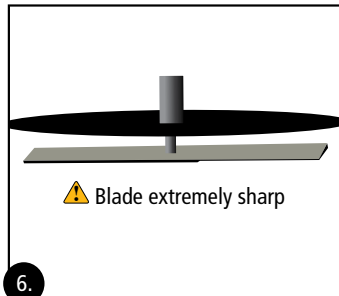

6.

MAINTENANCE

In order to facilitate the trimming, clean both sides of the grate and blades frequently with isopropyl alcohol on a cloth. Sharpen the blade when necessary. See sharpening instructions below.

ADJUSTMENT OF THE BLADES HEIGHT:

To adjust the height of the blade, follow these steps:

- A. Carefully remove the grate and turn it upside down.
- B. **CAUTION** ⚠ The blade is extremely sharp.
- C. Using the Allan Key provided, loosen the set screw on the chrome collar.
- D. Remove the chrome collar.
- E. Carefully remove the blade from the shaft.
- F. Add one more spacer (provided).
- G. Replace the blade on the shaft with the beveled edge facing away from the grate.
- H. Replace the chrome collar on the shaft
- I. **CAUTION** ⚠ Do not push the chrome collar downward as this will cause the rotation of the handle to be stiff.
- J. Tighten the set screw on the chrome collar with the Allen Key.

SHARPENING THE BLADE

1. Follow steps A to E above to remove the blade.
2. Clean the blade with isopropyl alcohol on a cloth.
3. Use a grinding stone to sharpen the blade on both cutting edges.
4. If you are uncertain on how to use a grinding stone, seek professional help.
5. Follow steps G to J above to replace the blade.

FOR INFORMATION OR TO ORDER:

Visit: www.Trimpro.ca • Contact: info@trimpro.ca • Call (Canada): +1-450-349-0811 • Fax (Canada): +1-450-349-2640

Patents: CAN: 2,470,370 • USA : 7,168,643 • EUR: 1,662,858 B1 • AUSTRALIA: 2004269786 CE standard